

A/B type Maintenance Schedule

Code	Service Required	Exceptional use cases (not scheduled by Maintenance Minder)
A	Replace engine oil	Replace oil 1 x per year if oil life has not expired after 12 months
B	Replace engine oil and filter Inspect front and rear brakes/service as necessary Check parking brake adjustment Inspect the following items: ● Tie rod ends, steering gear box ● Suspension components ● Driveshaft boots ● Brake hoses and lines ● All fluid levels and condition ● Exhaust system ● Fuel lines and connectors ● Check tire repair kit sealant expiration date (if equipped)	Replace brake fluid every 3 years (all cars)
1	Rotate tires	
2	Replace engine air filter* Replace cabin air filter* Inspect drive belts	* Gravel road/high soot. If you drive regularly on dusty gravel roads or areas with visible airborne soot, replace the air and cabin filter elements every 24,000km.
3	Replace transmission fluid* Replace clutch fluid (only manual transmission models) Replace transfer fluid (only V6 4WD/AWD models)	* Mountains and towing. If you regularly pull a trailer or drive in slow steep mountainous regions, replace transmission fluid every 40,000km.
4	Replace spark plugs Inspect valve clearance Replace timing belt (only V6 engine models)* Inspect water pump (only V6 engine models)	* Extreme temperatures. Replace timing belt every 100,000km if used often in extreme temperatures (over 43°C or less than -30°C).
5	Replace engine coolant	
6	Replace rear differential fluid (only 4WD/AWD models) Replace Twin Motor Fluid (only hybrid + AWD models)	* Mountains and towing. First differential fluid change required at 12,000km, then every 24,000km if used for heavy towing or in mountainous regions.